 

 
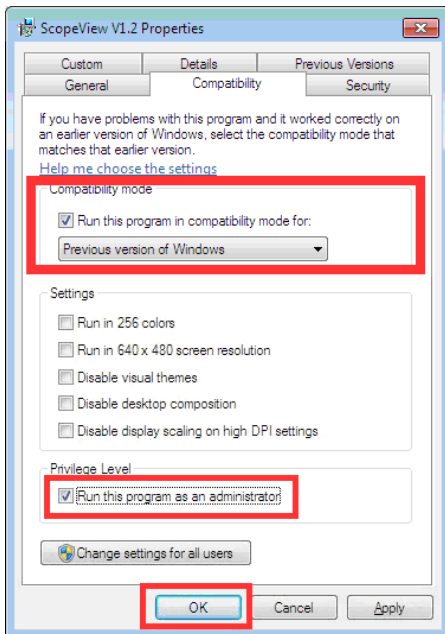


ScopeView v1.2 program manual

Install and Uninstall

Insert the CD into the CD-Rom, then double click the CD driver icon in “My Computer” to browse the CD. Find the installer , double click it and install the software step by step as prompted. There will be a short-cut icon  created on your desktop after installation.

When install Vista/WIN7/WIN8 system, please set the install file running as administrator permission and compatibility mode , Setting method is right-click on  —Property—Compatibility—Tick “Run this program in compatibility mode for” & “Run this program as an administrator” —OK.




To uninstall, follow the path “start”->”programs”->”ScopeView”->”Uninstall ScopeView”, and click “Enter” to confirm the uninstall.

Access and exit the program


Start

1. Double click  on desktop.
2. Find and run the “ScopeView” in programs menu.


Exit

1. Close the program by clicking .
2. Find the “Exit” option in the “File” menu


Interface Instructions

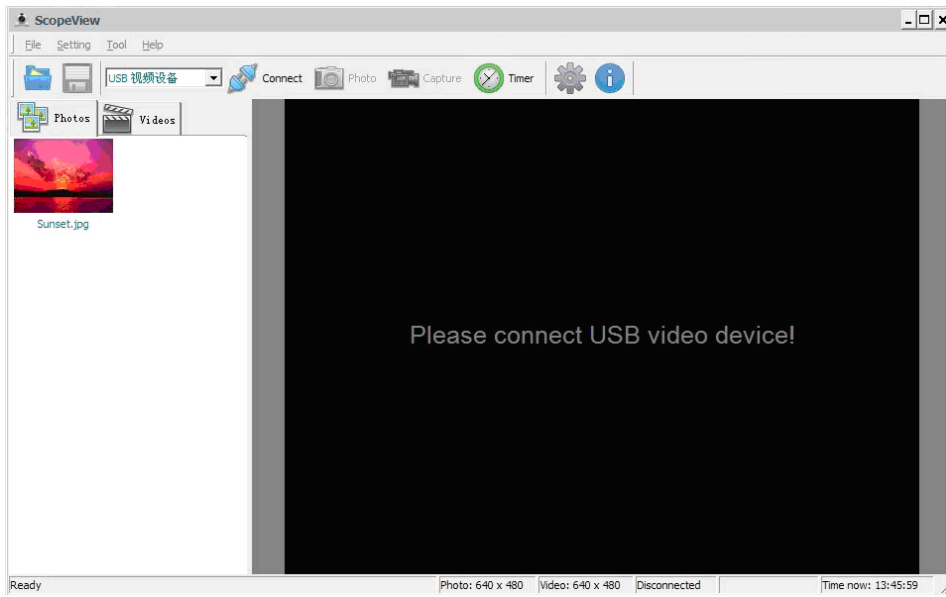

Initial interface after starting

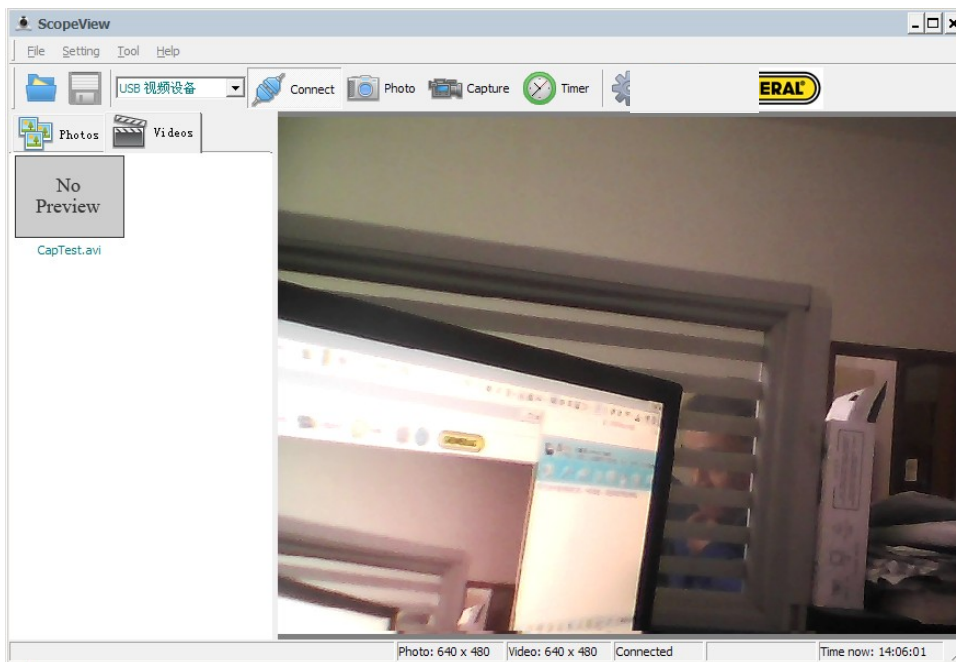

 Connected and receiving feed from the scope

1.  For menu functions, please refer to details in below.

2. Short-cuts



— Open pictures and videos



— save changed pictures



 
— device options, browse and choose the device from active USB or build-in video feeds.




connect or disconnect the chosen device



take a picture



 video capture, press to start and press again to stop



set photo and video capture schedule



set image resolution, storage path, format of video files, video resolution and compress options



program information

3. Photo: 640 x 480 Video: 640 x 480 Connected Time now: 14:46:29 indicates photo resolution, video resolution, status and time




4. photo tab and video tab, click to show the list of all stored photos or videos

General operation Steps

1. start the program
2. choose the device
3. connect the device
4. configuration (resolution, path, etc)
5. capture pictures or videos
6. browse, edit and playback
8. print

Pictures browsing and editing

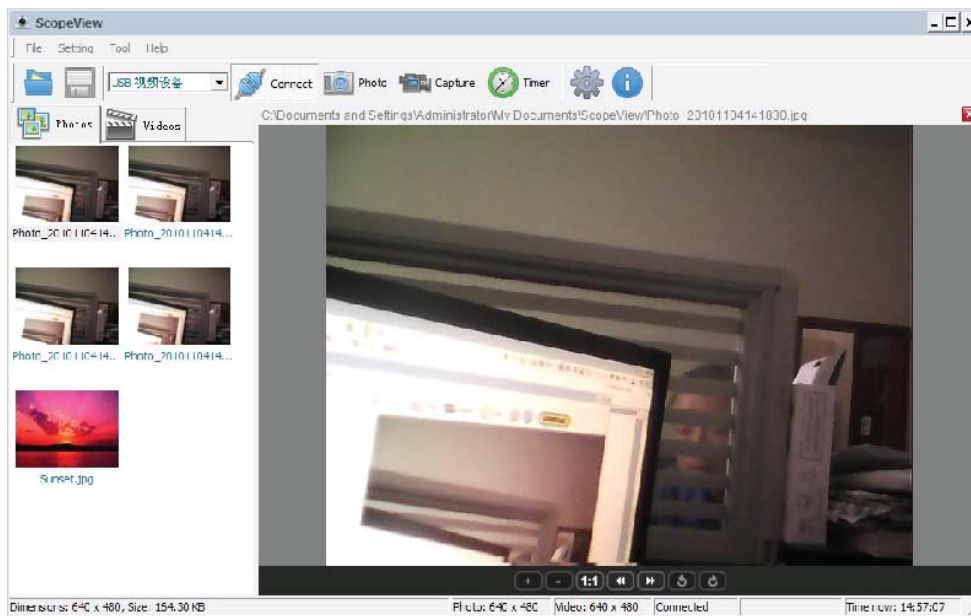



A screenshot of picture editing interface

Select photos tab


, right click the listed thumbnails to preview, delete, save as or retrieve

details of the picture. Double click to display the picture in the main window.


Use  to zoom, restore, rotate or switch pictures. Right click the picture in the main window to bring out the operation menu. Hover the mouse near the left or right side of the picture, the pointer will transform into a yellow arrow, click to view the previous or next picture.

Click  to close or exit the editing main window.



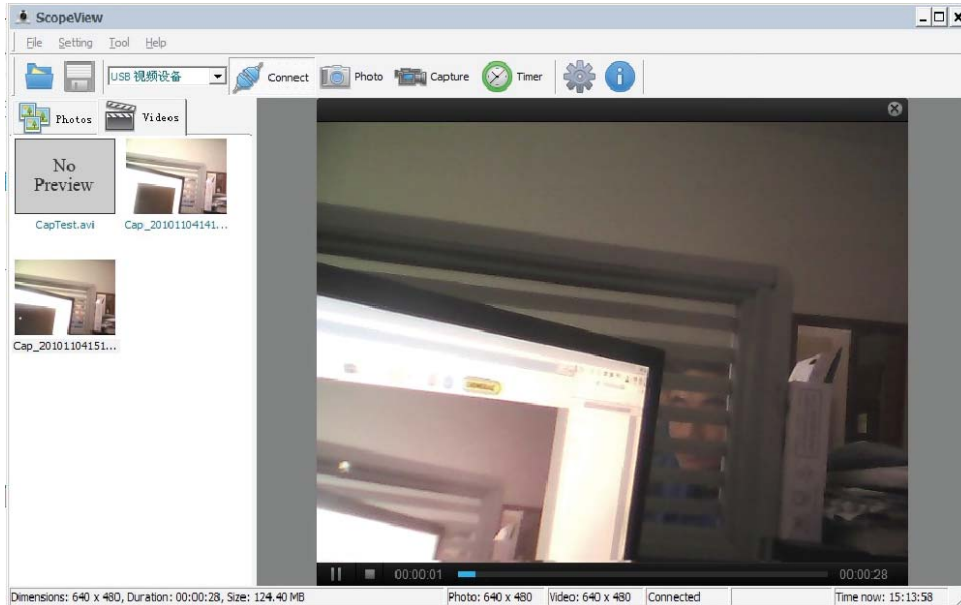

Video playback



A screenshot of video playback interface

Select the videos tab  to get a list of all playable clips, similar to pictures, right click to bring out the menu on which you can preview, save as, delete or retrieve details of the clip. Double click the thumbnail to play the clip in the main window.

The status bar  will appear

at the bottom of the main window. Use ,  and  to play, pause and stop the playback. Click  located on the upper right corner to exit the playback.

Printing

1. Setup the page settings by accessing "File" option from the menu before start printing.
2. Use "File" -> "Print Preview" to preview the printing in the main window.
3. Use "File" -> "Print" to setup the printing configurations and start printing.